
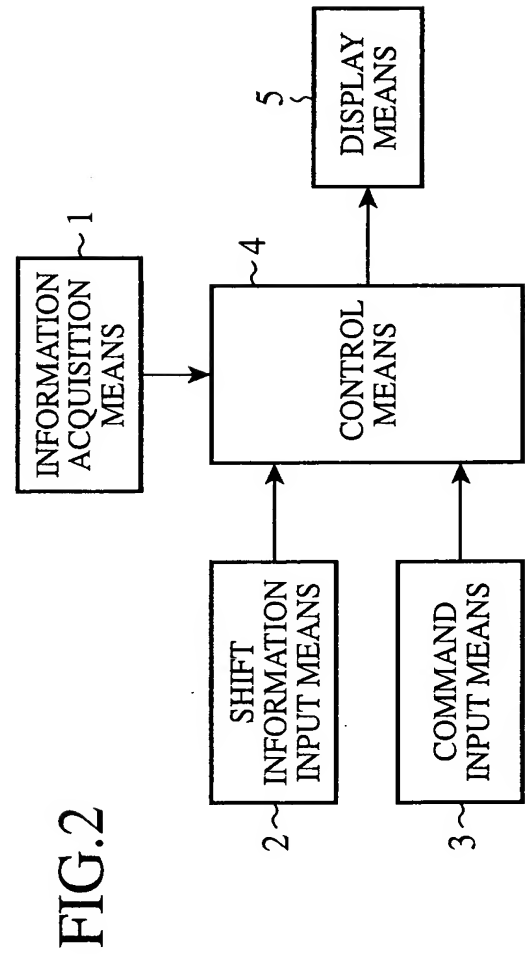


1/6

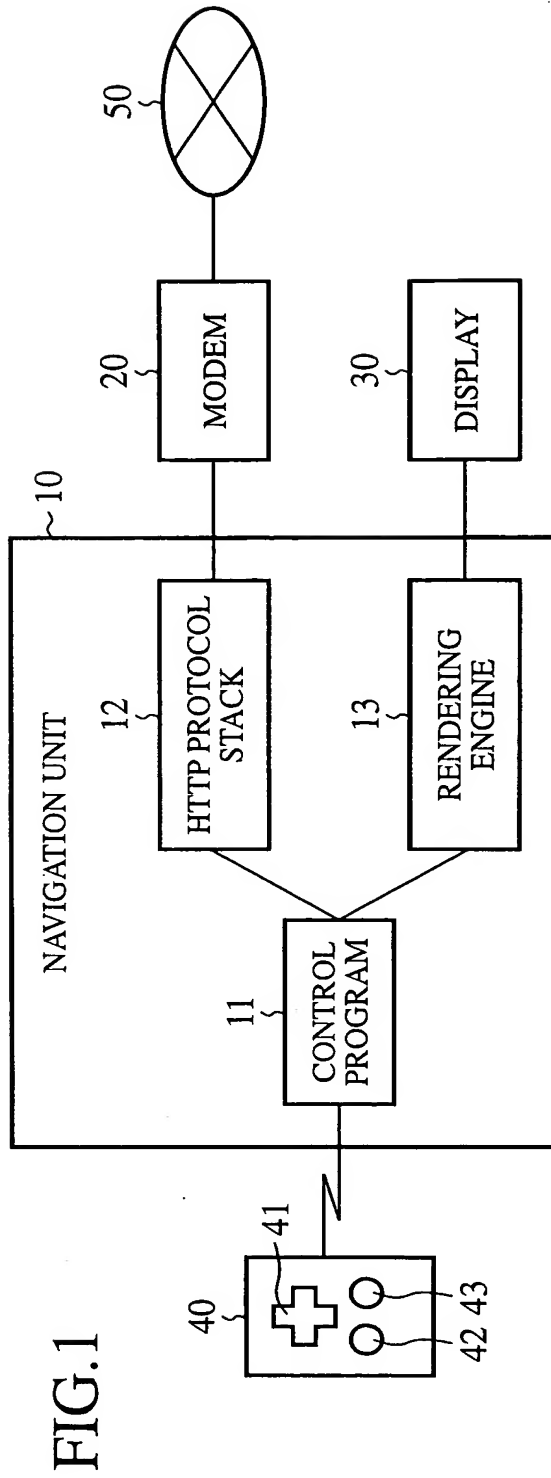

2/6

FIG.3

MODE	ENTER	BACK	TOP	BOTTOM	LEFT	RIGHT
MENU MODE	CARRY OUT MENU ITEM SELECTED	COMPLETE BROWSER FUNCTION	INVALID	TRANSITION TO SURF MODE	MOVE FOCUS TO LEFT-HAND SIDE MENU ITEM	MOVE FOCUS TO RIGHT-HAND SIDE MENU ITEM
SURF MODE	LEFT-CLICK OF MOUSE AT MOUSE CURSOR POSITION	TRANSITION TO MENU MODE	MOVE MOUSE CURSOR TO UPWARD DIRECTION	MOVE MOUSE CURSOR TO DOWNWARD DIRECTION	MOVE MOUSE CURSOR TO LEFT	MOVE MOUSE CURSOR TO RIGHT
SCROLL MODE	INVALID	TRANSITION TO SURF MODE	SCROLL WHOLE PAGE IN DOWNWARD DIRECTION	SCROLL WHOLE PAGE IN UPWARD DIRECTION	SCROLL WHOLE PAGE TO RIGHT	SCROLL WHOLE PAGE TO LEFT

FIG.4

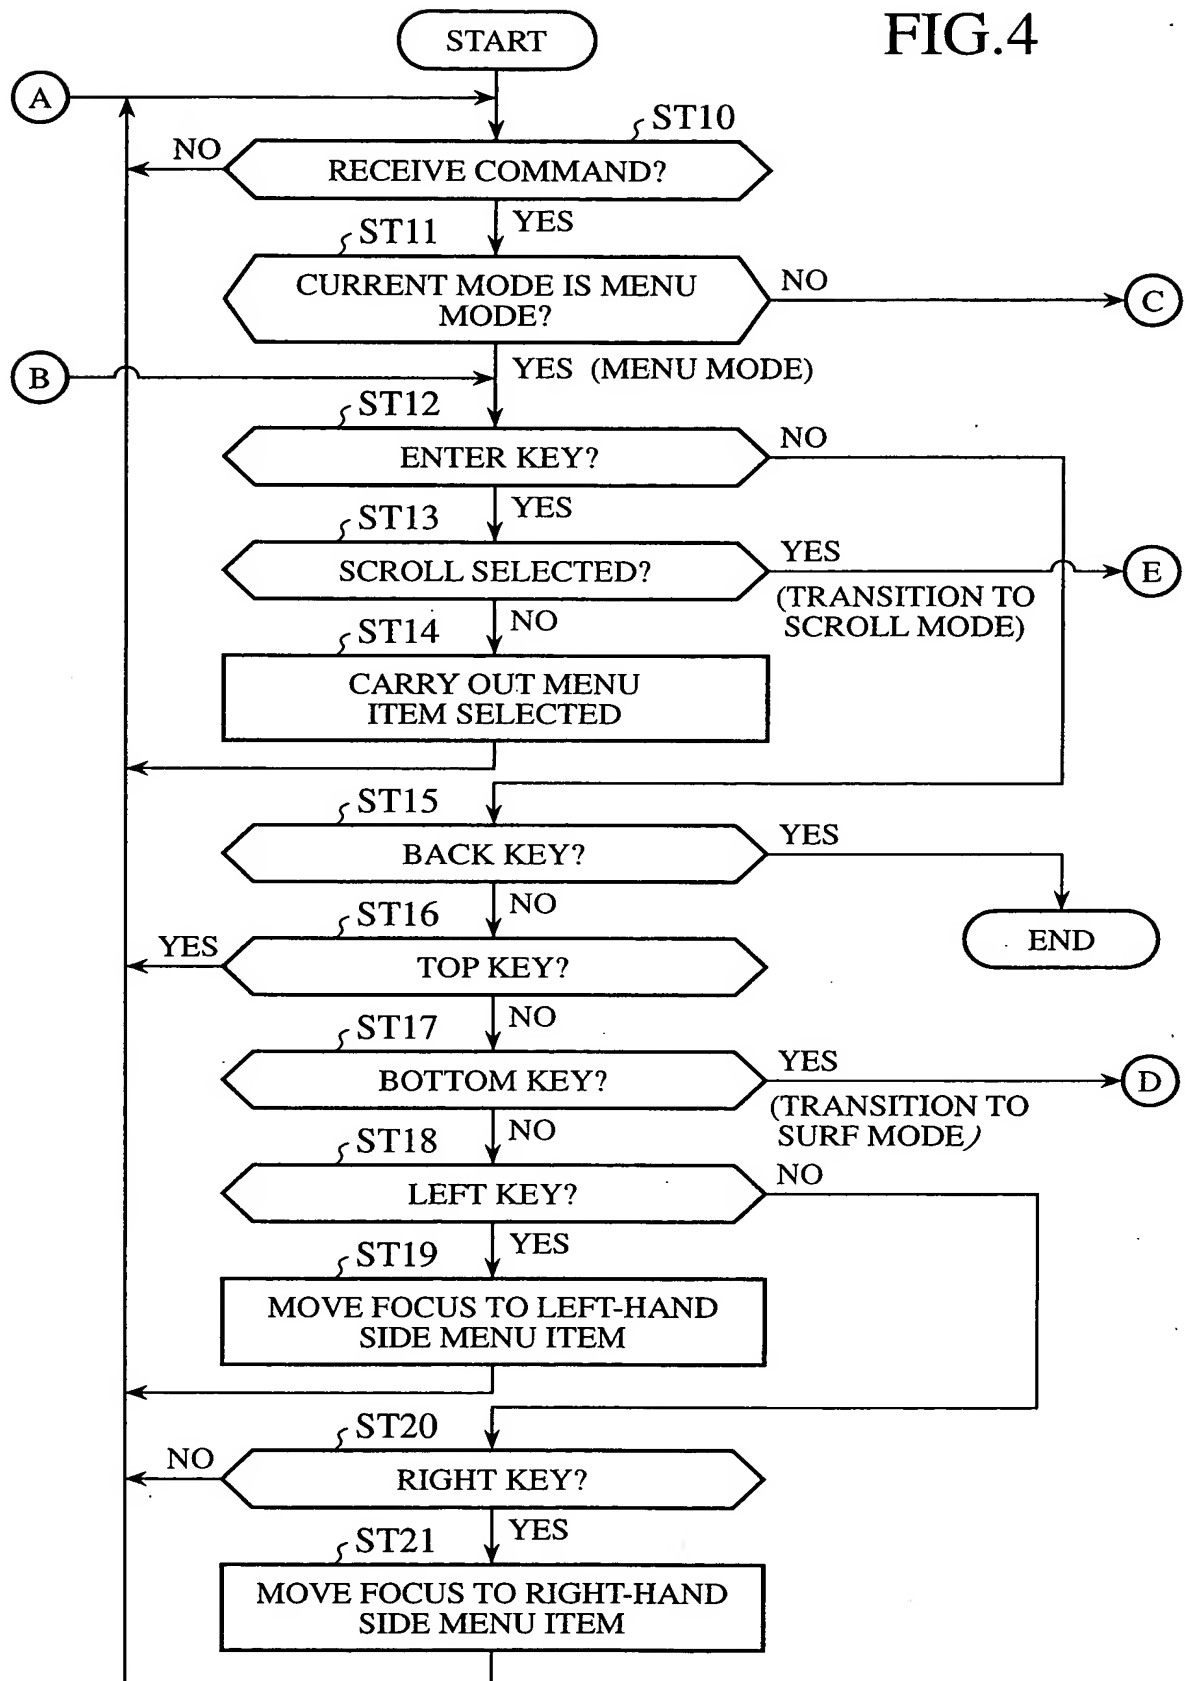


FIG.5

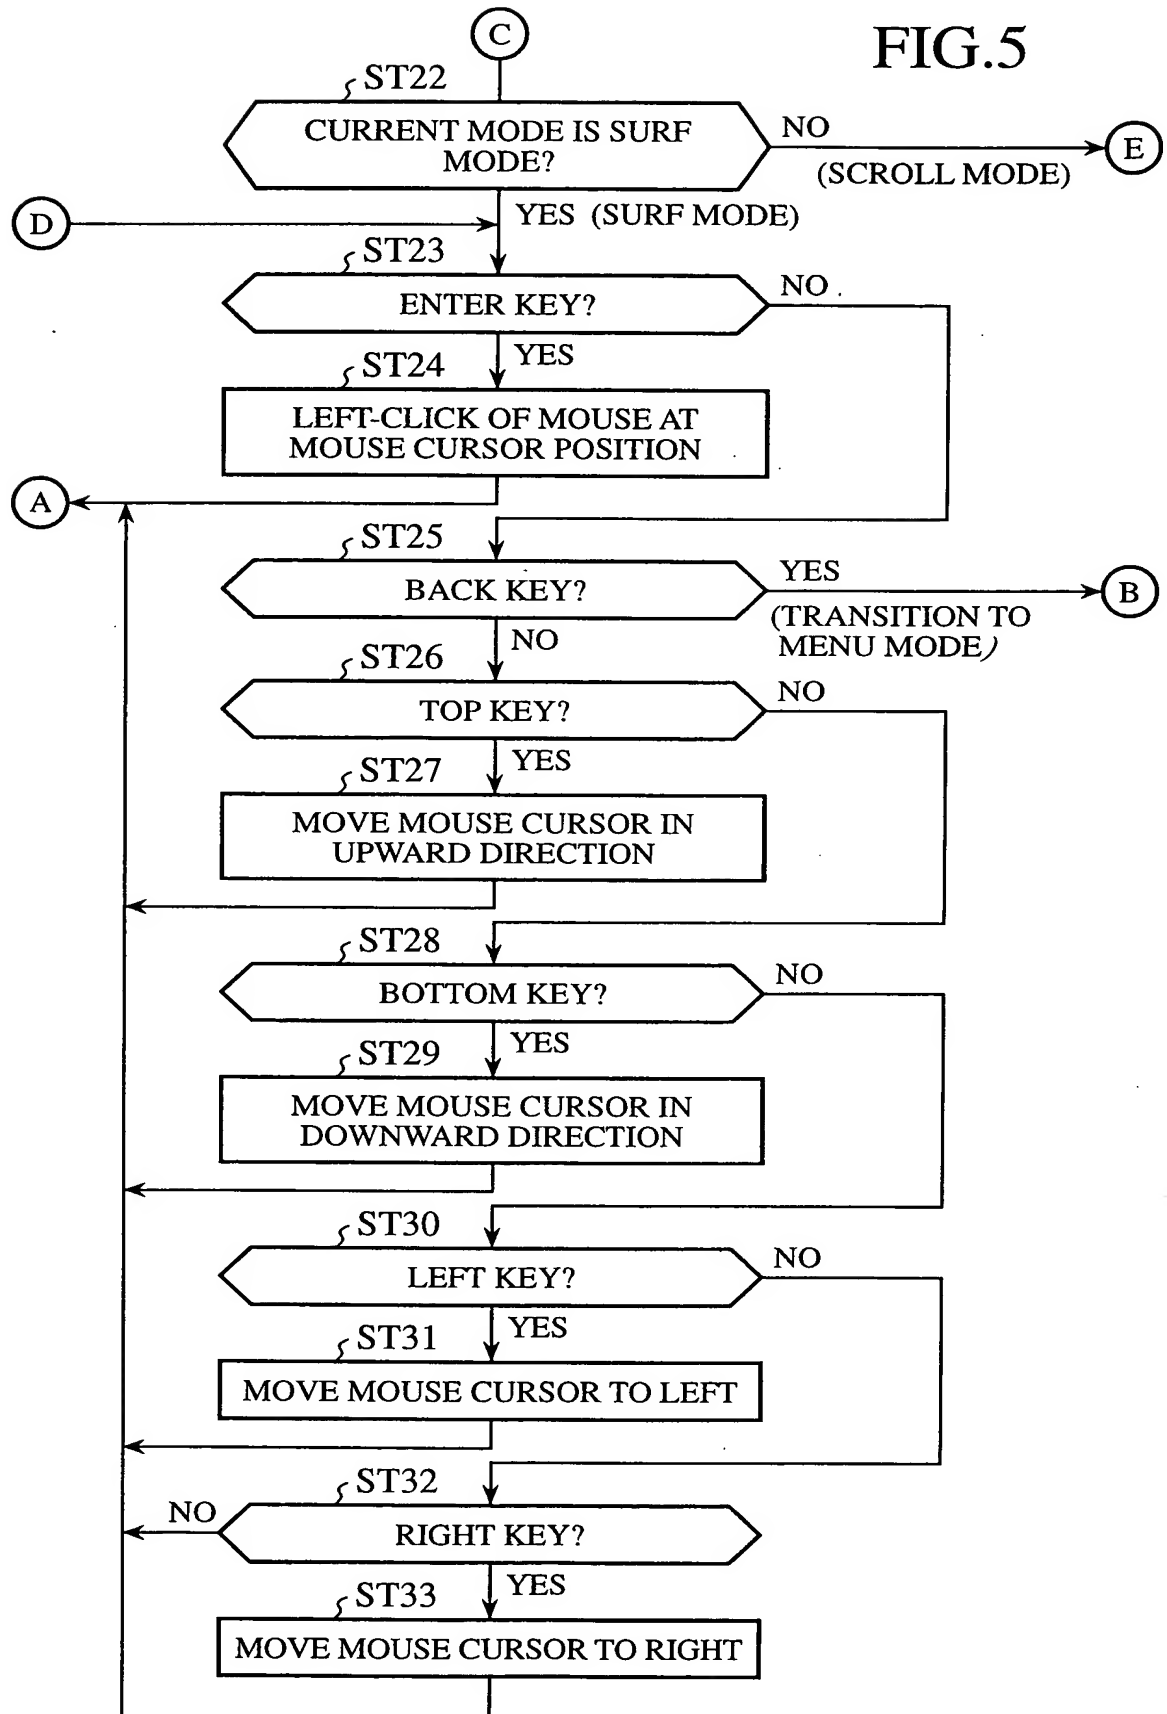


FIG.6

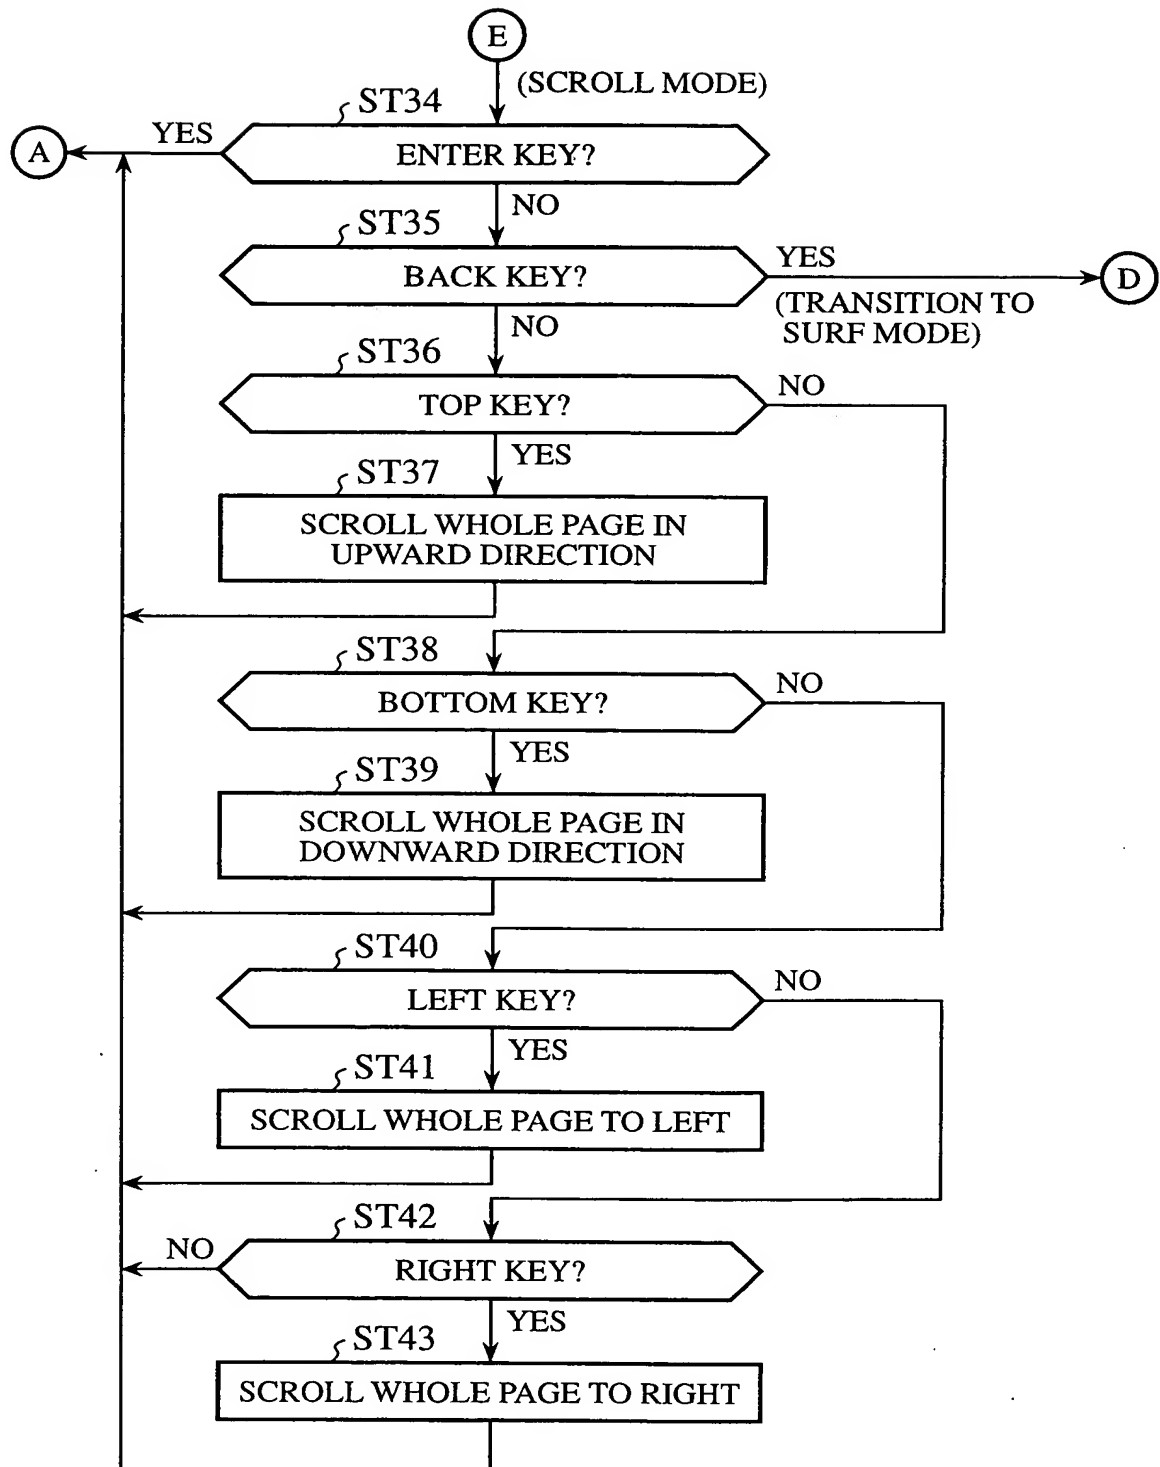


FIG.7A

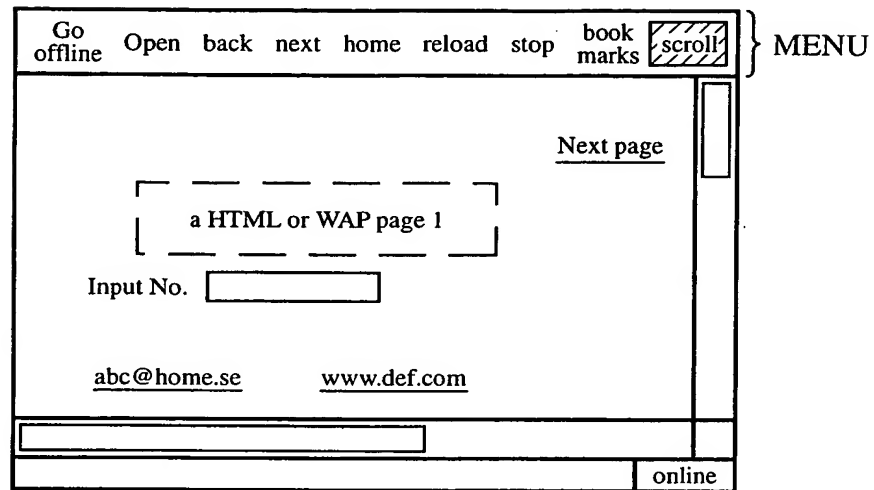


FIG.7B

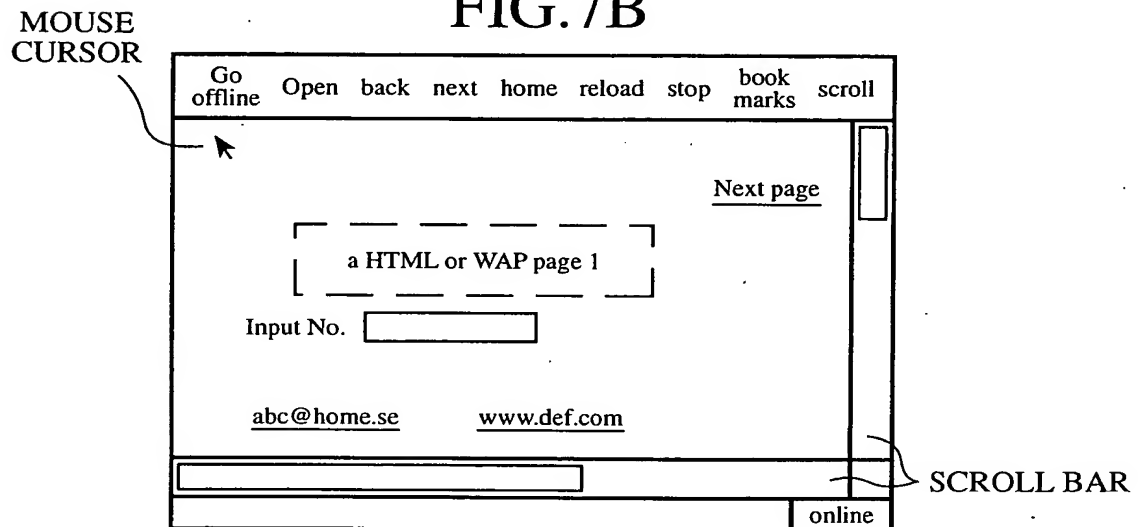


FIG.7C

